

PIERCE ARROW PRODUCT LIMITED WARRANTY

Pierce Arrow Inc. warrants to the original purchaser only (whether a wholesale, OEM or retail customer) that the goods, equipment, and merchandise manufactured by Pierce Arrow are free from defects in material and workmanship. The Pierce Arrow limited warranty on parts covers such items for a period of one year on mechanical and electrical from the date of shipment by Pierce Arrow. All warranties cover only the product or product parts, and are nontransferable.

OBTAINING WARRANTY SERVICE

Pierce Arrow must be notified promptly in writing about the defect before any means of repair have been made. The merchandise must be delivered by the purchaser to Pierce Arrow in Henrietta, Texas at the purchaser's expense. Pierce Arrow reserves the right to repair or replace the merchandise proved to be defective. The purchaser is responsible for the cost of repairs made by Pierce Arrow if the repairs are not covered by the Pierce Arrow warranty.

EXCLUSIONS

The Pierce Arrow warranty is not intended to cover normal maintenance parts. Nor is the warranty intended to cover any change or defect due to accident; misuse; improper; inadequate or unauthorized repair; failure to provide maintenance or uses for which the equipment was not intended; and normal deterioration due to weather or road conditions. Reference the owner's manual for safety, installation, operation and maintenance guidelines.

The warranty does not bear the cost of labor, transportation, shipping damages, claimed down time, loss of profit or goodwill, or any other special, incidental, indirect, or consequential damages, concerning or related to any product or part, whether based upon negligence, strict liability, breach of contract, breach of warranty, misrepresentation, or any other legal theory.

Pierce Arrow makes no warranty, expressed or implied, to finished products manufactured or supplied by other manufacturers, and supplied from Pierce Arrow to the purchaser, including but not limited to, any vehicle to which our products is affixed to, and any accessories.

Merchandise manufactured by Pierce Arrow is not designed or intended for the movement of people and are not to be used in the operation of elevators or other improper uses. Any improper use of the product may void the warranty.

CONDITIONS OF SALE

RETURNS: No returns are accepted without prior authorization. All items must be returned in thier entirety. Please contact a sales representative for authorization. Upon authorization, returns must be shipped freight prepaid and may be subject to a 15% restocking fee. Please do not send returns COD. No returns will be accepted later than 30 days from the date of invoice.

CLAIMS: Claims for breakage or damages must be made to the carrier. We, the shipper, cannot file a claim for purchasers. When placing an order with Pierce Sales, the terms and conditions of payment, shipping, delivery and claims, create an agreement between the purchaser and Pierce Sales. The agreement is to be performed in Clay County, Texas. Pierce Sales is not responsible for, and has no liability for, damage in shipment, during assembly, installation, erection, or that arising from accidents, abuse or improper operation of goods, equipment or merchandise.

Merchandise sold by Pierce Sales, but not manufactured, is subject to the manufacturer's warranty only. The manufacturer's warranty is available upon request.

All warranties cover only the product or product parts, not labor costs, transport costs nor the installation or removal or the product.

Pierce Arrow Inc.
549 U.S. HWY 287 S.
Henrietta, Texas 76365
P: 940-538-5643
F: 940-538-4382

Revised 07-16

PIERCE

PULLING FOR YOU

Owner's Manual: LED SPOTLIGHT WITH MAGNESIUM ALLOY BODY



WARNING

The Pierce spotlight is not to be mounted on a vehicle while driving on the highway or on rugged terrain.

PIERCE ARROW INC.
549 U.S. HWY 287 S.
HENRIETTA, TEXAS 76365

TOLL FREE 800-658-6301

FAX 940-538-4382

www.PierceArrowInc.com
www.YouTube.com/PierceArrowInc

REGISTER NOW!

Sign up for product updates at www.piercearrowinc.com/warranty

PIERCE SPOTLIGHTS

Thank you for purchasing the PIERCE spotlight with wireless remote. Below you will find the specification, installation and remote information. If you have any questions, let us know how we can help by calling Pierce at 800.658.6301.

SPECIFICATIONS

	LED
Light	16 CREE LEDs (10W) 360 Degree Continuous Rotation 180 Degree Tilt Temperature: 6,000 K Candle Power: 57.39 lm / W
Weight	10 lbs.
Measurements	9.29" x 7.87" x 9.6"
Power	12 VDC / 80 W
Mounting	Magnet or Hard
Plug	12 V power outlet, plug with 8' cord
Remote	Wireless up to 100 ft. A23 Battery
Waterproofing	IP 65
Warranty	1 year
Origin	China



WARNING


The LED must be connected to a minimum of **12 volts**. The spotlight will not turn on if the battery level is lower than 12 volts.

REGISTER NOW!

Sign up for product updates at www.piercearrowinc.com/warranty

INSTALLATION

1. Remove from the box.
2. Route the cord to a convenient place.
3. Plug into a 12V power outlet.
4. Turn on the spotlight using the wireless remote.

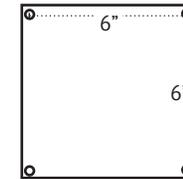

HARD MOUNTING

Hard mount the LED spotlight using the 6" x 6" pre-installed square mount and included screws.

PAIRING THE CONTROL AND THE SPOTLIGHT

The remote control works before coding; however, we suggest coding the control to the spotlight before use in order to avoid disturbance from other remote controls.

Step 1: Connect the spotlight to a 12-14V direct current. The spotlight will flash once to signal there is a connection.

Step 2: Press the On/Off button on the spotlight for 15 seconds or until the light flashes 3 times in succession (long flash).

Step 3: Again, press the On/Off button on the remote control for 15 seconds or until the light flashes 3 times in succession (long flash). The spotlight is now paired to the control.


NOTE: Please code the light first and the remote control after, so that coding on replacement control will take place of the original controller directly.

NOTE: In the event you misplace your control, please press the On/Off button on the remote control for 15 seconds to pair the replacement.

How to Unpair

Step 1: Press the On/Off button on the remote control for 15 seconds while the spotlight is plugged in. Wait until the light flashes 3 times in succession (short flash), it lifts code successfully.

Step 2: Press the On/Off button on the spotlight for 15 seconds or until the light flashes 3 times in succession (short flash). The control is now unpaired.

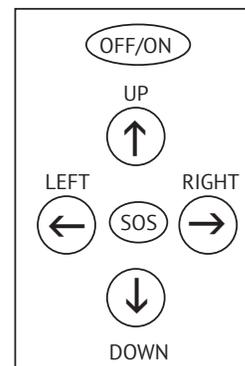

REMOTE USAGE

An A23 battery is used in the remote. Please note: if the spotlight is left on, it will drain your battery.

- OFF/ON** Press once to turn the light on. Press again to turn the light off.
- SOS** Signal the international SOS pattern.
- UP** Press continuously to go up.
- DOWN** Press continuously to go down.
- LEFT** Press continuously to go left.
- RIGHT** Press continuously to go right.