


# SIX FUNCTION WRECKER REMOTE WIRING

P0406

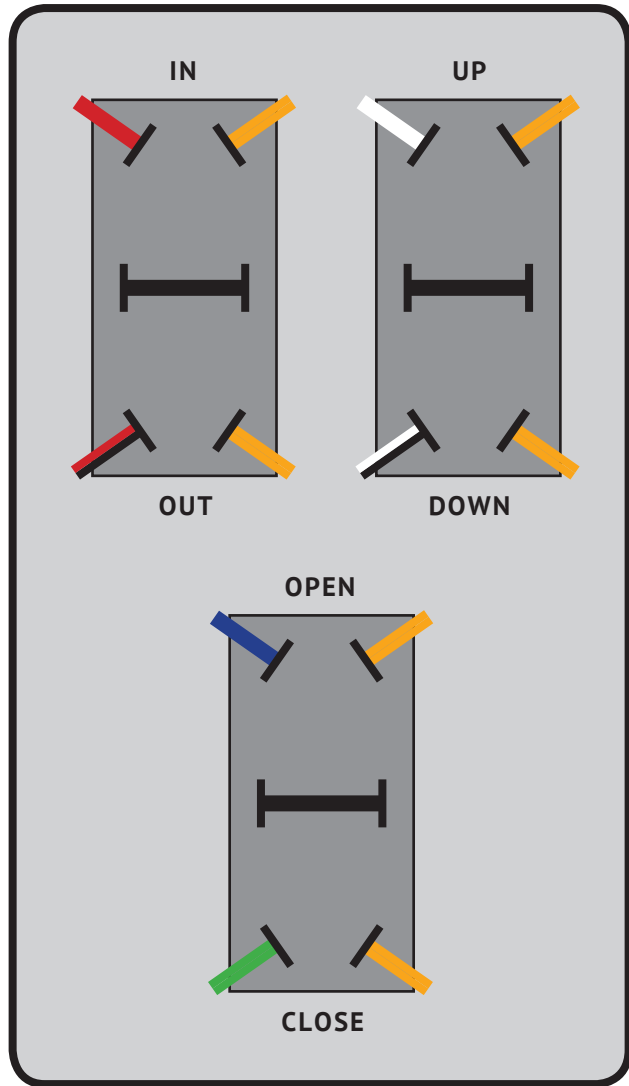

Back view



Front view

# PIERCE

Pierce Arrow Inc. • [www.piercearrowinc.com](http://www.piercearrowinc.com) • 1-800-658-6301  
549 U.S. HWY 287 S. • Henrietta, Texas 76365

CATEGORY

REMOTE

PART NO.

P0406

PRODUCT DESCRIPTION

Six Function Wrecker Remote









WIRING DESCRIPTION

This diagram depicts standard wiring for the P0406 wrecker remote.

NOTE: Includes 15' cord but no plug for wiring.

WIRING CHART

Connect the wires as shown in the diagram.

-  OUT (red)
-  IN (red/black)
-  DOWN (white)
-  UP (white/black)
-  CLOSE (blue)
-  OPEN (green)
-  JUMP (orange, jumper wire is brown)
-  JUMP (black, jumper wire is red)