


WIRELESS REMOTE to COMPACT WINCH SOLENOID


PS002 Wireless Remote transmitter



PS002 Wireless Remote receiver

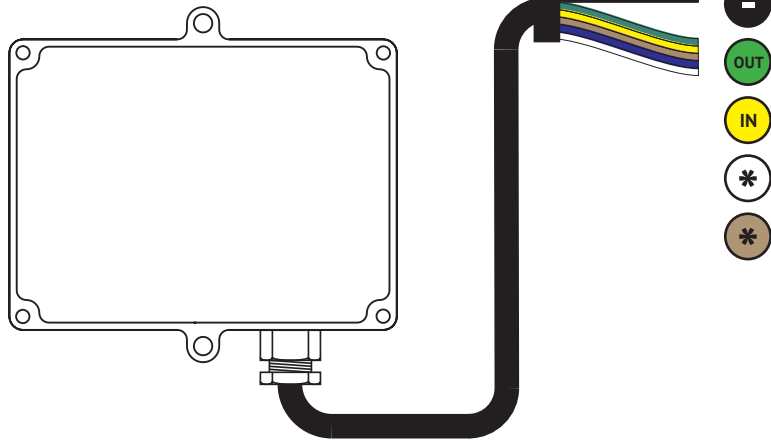

PS528C-N Compact Winch Solenoid

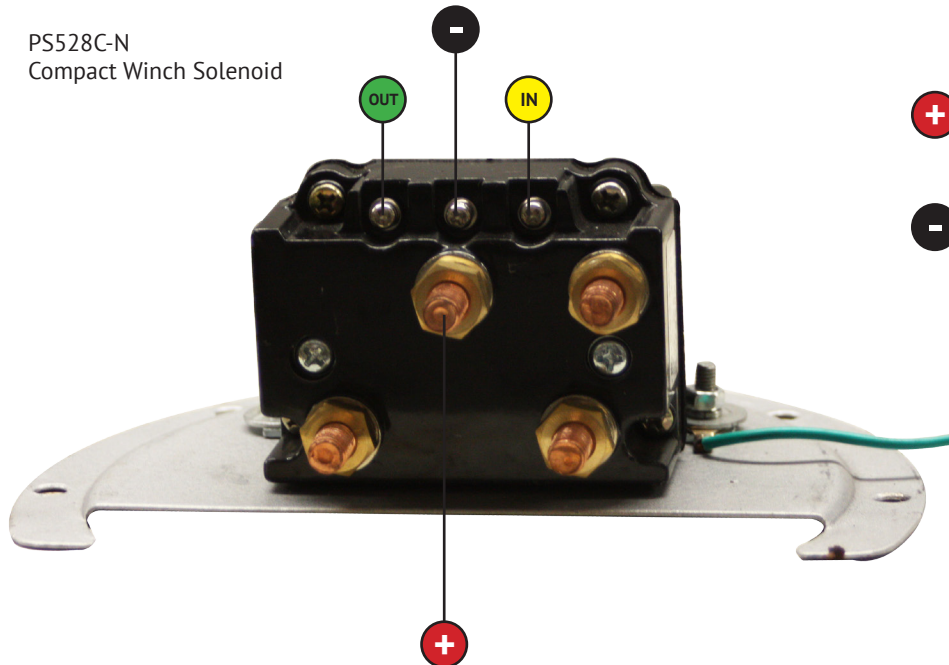

- + Red (12V POWER) needs to be wired directly to the battery.
- Black (GROUND) needs to be wired directly to the battery.

PIERCE

Pierce Arrow Inc. • www.piercearrowinc.com • 1-800-658-6301
549 U.S. HWY 287 S. • Henrietta, Texas 76365

CATEGORY	REMOTE
-----------------	--------

PART NO.	PS002 to PS528C-N
-----------------	-------------------

PRODUCT DESCRIPTION
Two-Function Wireless Remote to Compact Winch Solenoid

WIRING DESCRIPTION
This chart depicts wiring from a Pierce PS002 wireless remote to a Pierce PS528C-N compact winch solenoid.
NOTE: The connector for the large terminals would take a 5/16" ring terminal. The connector for the small screws would take a #5 ring terminal.

WIRING CHART
Connect the wires to the corresponding signs.
+ 12 V (red)
- GROUND (black)
OUT OUT (green)
IN IN (yellow)
* NOT USED (white)
* NOT USED (brown)