

WIRELESS REMOTE to ROUND SOLENOID ASSEMBLY


PIERCE

Pierce Arrow Inc. • www.piercearrowinc.com • 1-800-658-6301
549 U.S. HWY 287 S. • Henrietta, Texas 76365


PS002 Wireless Remote transmitter



PS002 Wireless Remote receiver

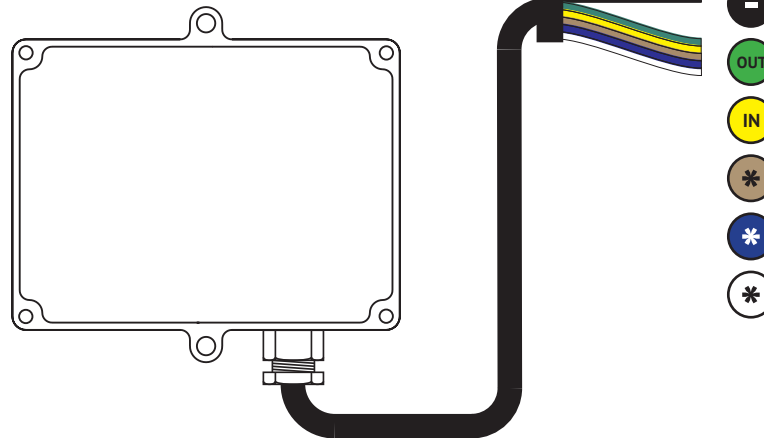

PS528C Round Solenoid Assembly

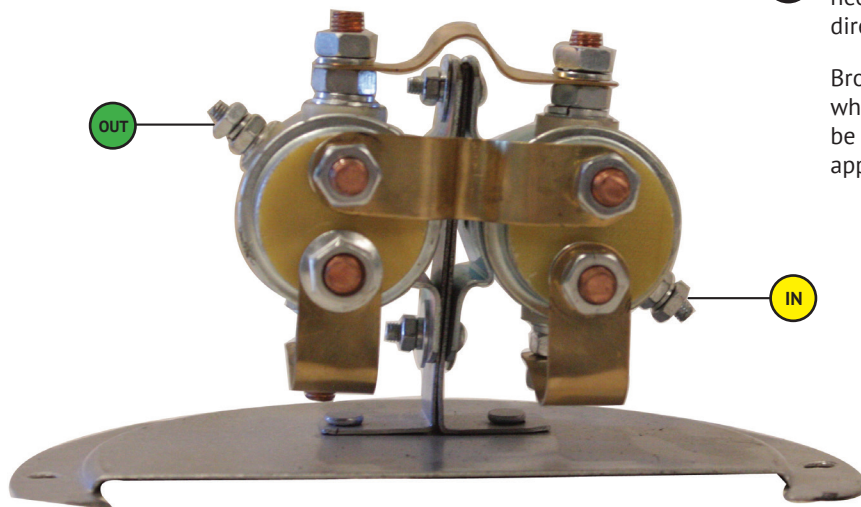

- Red (12V POWER) needs to be wired directly to the battery.
- Black (GROUND) needs to be wired directly to the battery.

Brown, blue, and white will not be used in this application.

CATEGORY

REMOTE

PART NO.

PS002 to PS528C

PRODUCT DESCRIPTION

Two-Function Wireless Remote to Round Solenoid Assembly

WIRING DESCRIPTION

This chart depicts wiring from a Pierce PS002 wireless remote to a Pierce PS528C Round Solenoid Assembly.

NOTE: Use #2 or #4 gauge cable for all connections. Use a 5/16-18" x 3/4" bolt for the ground connection. Wiring not included.

WIRING CHART

Connect the wires to the corresponding signs.

- | | |
|----------------|------------------|
| 12 V (red) | NOT USED (brown) |
| GROUND (black) | NOT USED (blue) |
| OUT (green) | NOT USED (white) |
| IN (yellow) | |