

WIRELESS REMOTE to COMPACT SOLENOID ASSEMBLY


PIERCE

Pierce Arrow Inc. • www.piercearrowinc.com • 1-800-658-6301
549 U.S. HWY 287 S. • Henrietta, Texas 76365


PS002 Wireless Remote transmitter



PS002 Wireless Remote receiver

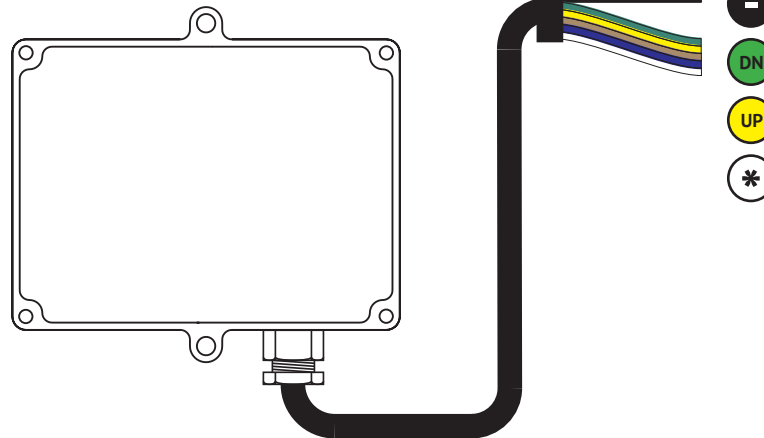

PS528N Compact Solenoid Assembly

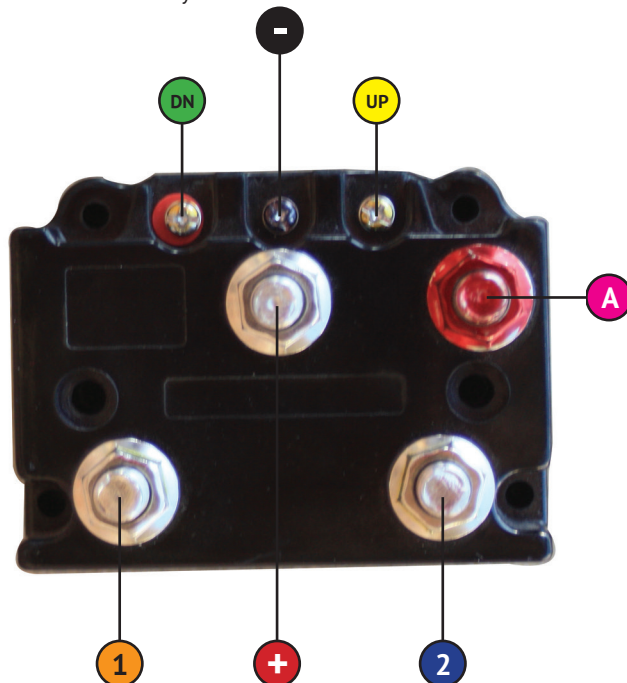

- +** Red (12V POWER) needs to be wired directly to the battery.
- Black (GROUND) needs to be wired directly to the battery.

CATEGORY

REMOTE

PART NO.

PS002 to PS528N

PRODUCT DESCRIPTION

Two-Function Wireless Remote to Compact Solenoid Assembly

WIRING DESCRIPTION

This chart depicts wiring from a Pierce PS002 wireless remote to a Pierce PS528N compact solenoid assembly.

NOTE: The connector for the large terminals would take a 5/16" ring terminal. The connector for the small screws would take a #5 ring terminal.

WIRING CHART

Connect the wires to the corresponding signs.

- | | |
|-------------------------|---------------------------------------|
| + 12 V (red) | * NOT USED (white) |
| - GROUND (black) | 1 F1 TO THE MOTOR (orange) |
| DN DOWN (green) | 2 F2 TO THE MOTOR (blue) |
| UP UP (yellow) | A ARMATURE TO THE MOTOR (pink) |